




Profiles

3.1.

Floor coving in view

(cod. art. P-GPA)

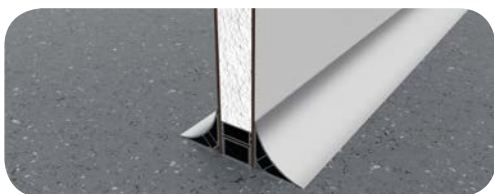

Truck profile H 94 mm for PVC flooring

(cod. art. P-Z094)




3.2.

3.3.

Truck profile H 74 mm for Epoxy flooring

(cod. art. P-Z074)

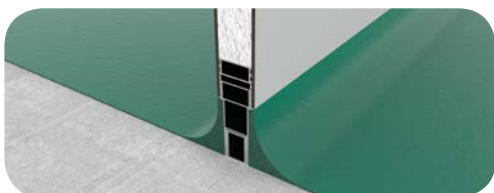

Flat profile H 60 mm

(cod. art. P-FH60)



3.4.

3.5.

180° vertical connection

(cod. art. P-GVE)



Regular curved profile

(cod. art. P-CUGR)



3.6.

3.7.

Small curved profile

(cod. art. P-CUPI)



Coving with L profile at external

(cod. art. P-AN60)



3.8.

3.9.

Head profile

(cod. art. PP-PRTES20)



C profile

(cod. art. P-PRTESC)



3.10.

3.11.

Coving at ceiling

(cod. art. P-GSO)



L profile at ceiling

(cod. art. P-AN60)



3.12.

3.13.

Floor connection

(cod. art. P-ROP)



Ceiling connection

(cod. art. P-ROS)



3.14.

3.1. Floor coving at floor

cod. art. P-GPA

Description

1. Tubular aluminum profile (36x25 mm) to fasten to floor the partition wall
2. Coving support
3. Extruded curve aluminum profile floor to wall
4. Caulked with silicone
5. Wall panel



Standard profile colors

-  RAL 9010 - Pure white
-  Anodized aluminum OX

Profile colors on request




RAL palette colors

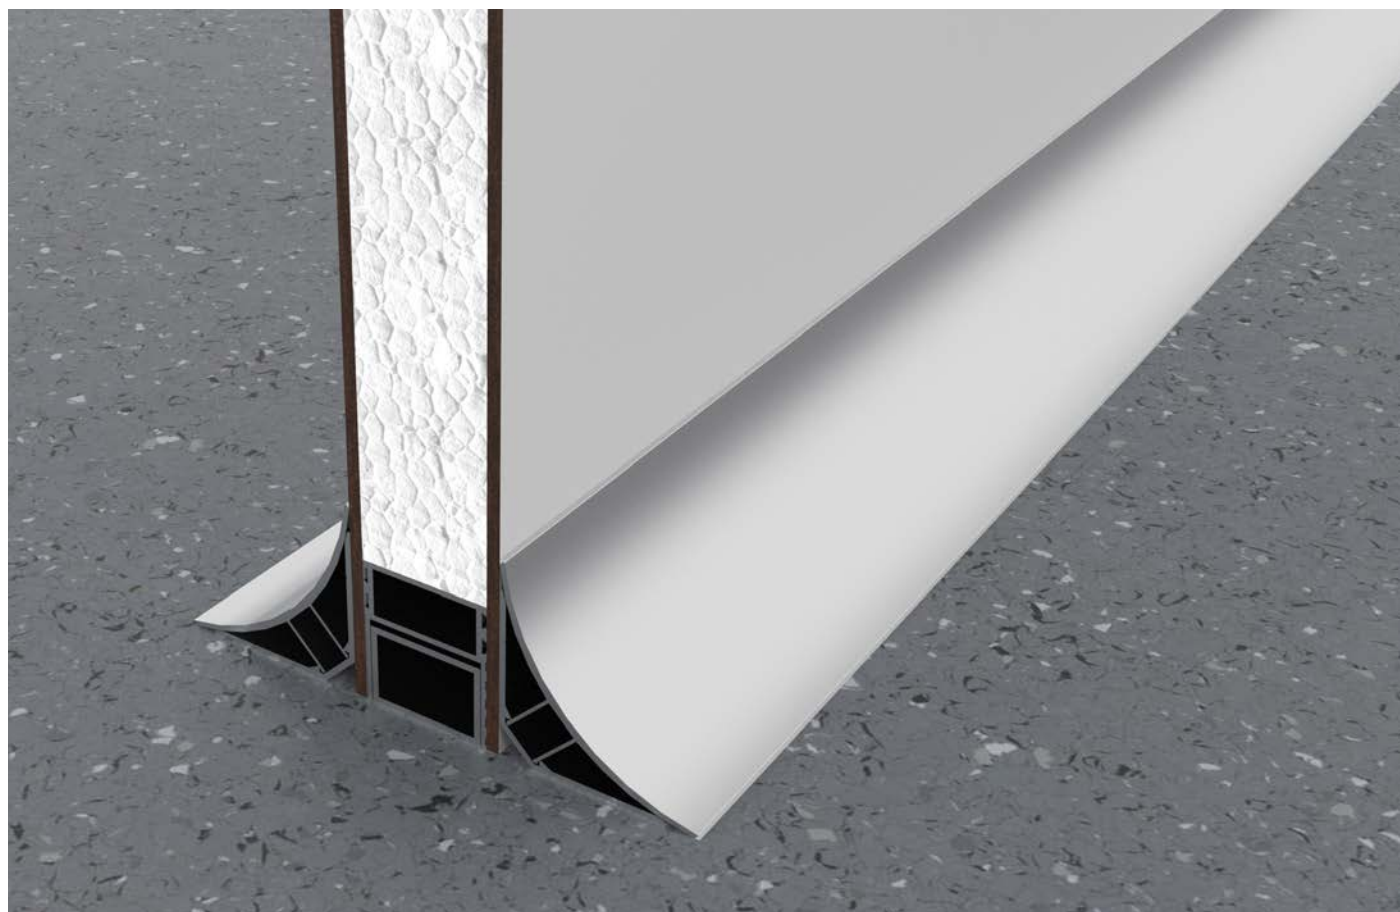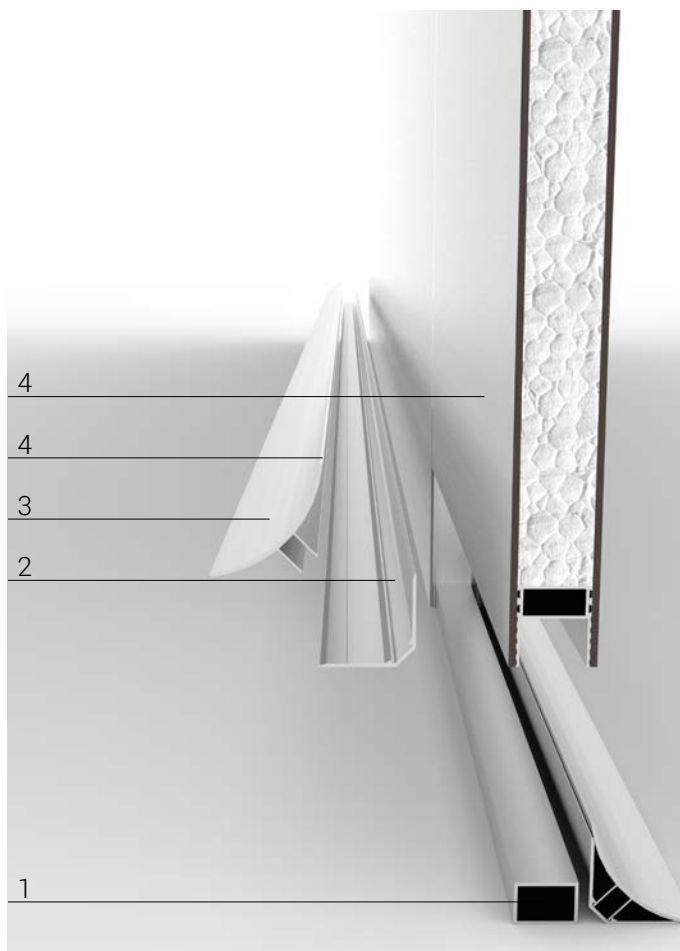


Description

1. Tubular aluminum profile (36x25 mm) to fasten to floor the partition wall
2. Aluminum floor truck profile (H 94 mm)
3. Coving support
4. Extruded curve aluminum profile
5. PVC coating 2 mm (no Delta 2000 scope)
6. Caulked with silicone
7. Wall panel

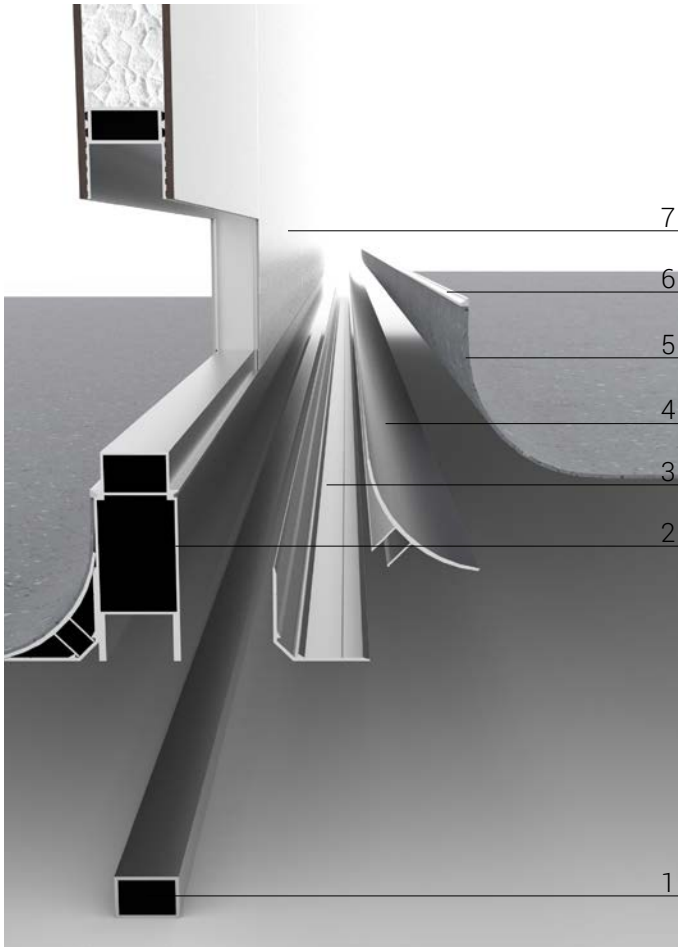

Profile colors

Raw aluminum 

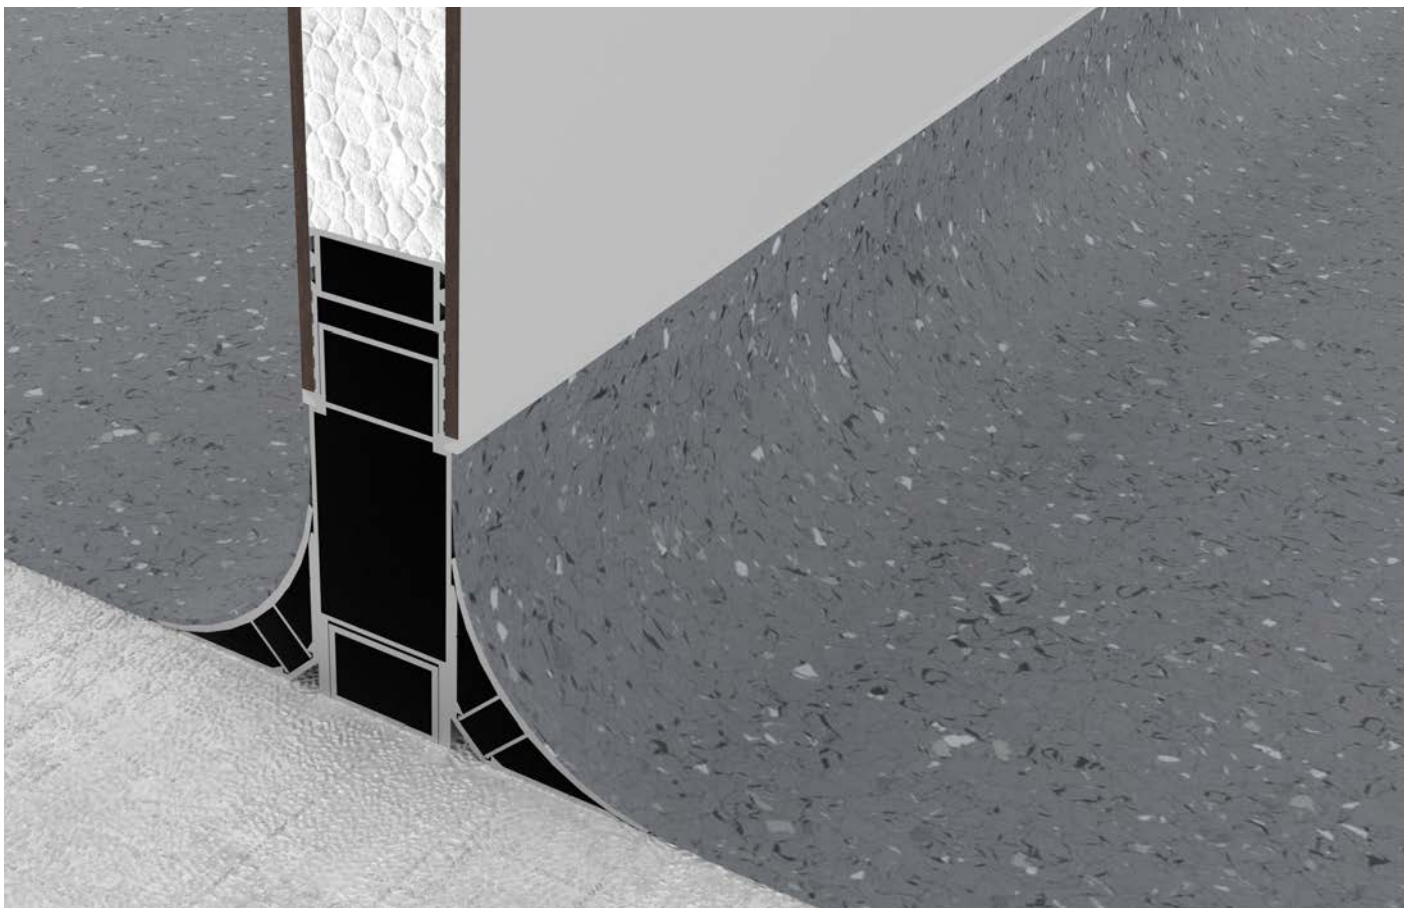


3.3. Truck profile H 74 mm for Epoxy flooring

cod. art. P-Z074


Description

1. Tubular aluminum profile (36x25 mm) to fix to floor the partition wall
2. Aluminum floor truck profile (H 74 mm)
3. Epoxy coating (no Delta 2000 scope)
4. Wall panel

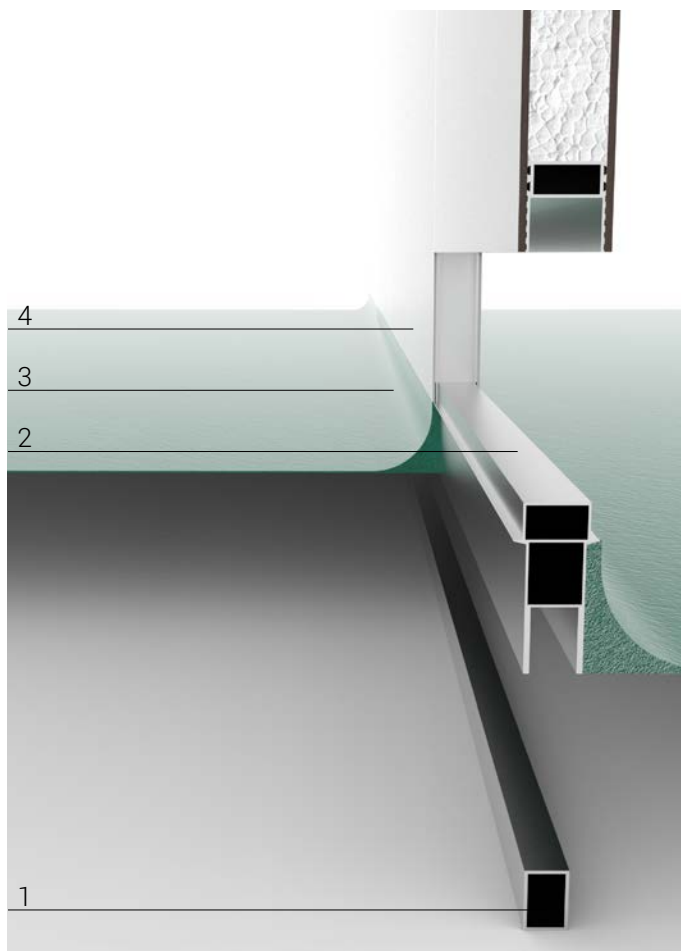


Profile colors

Raw aluminum

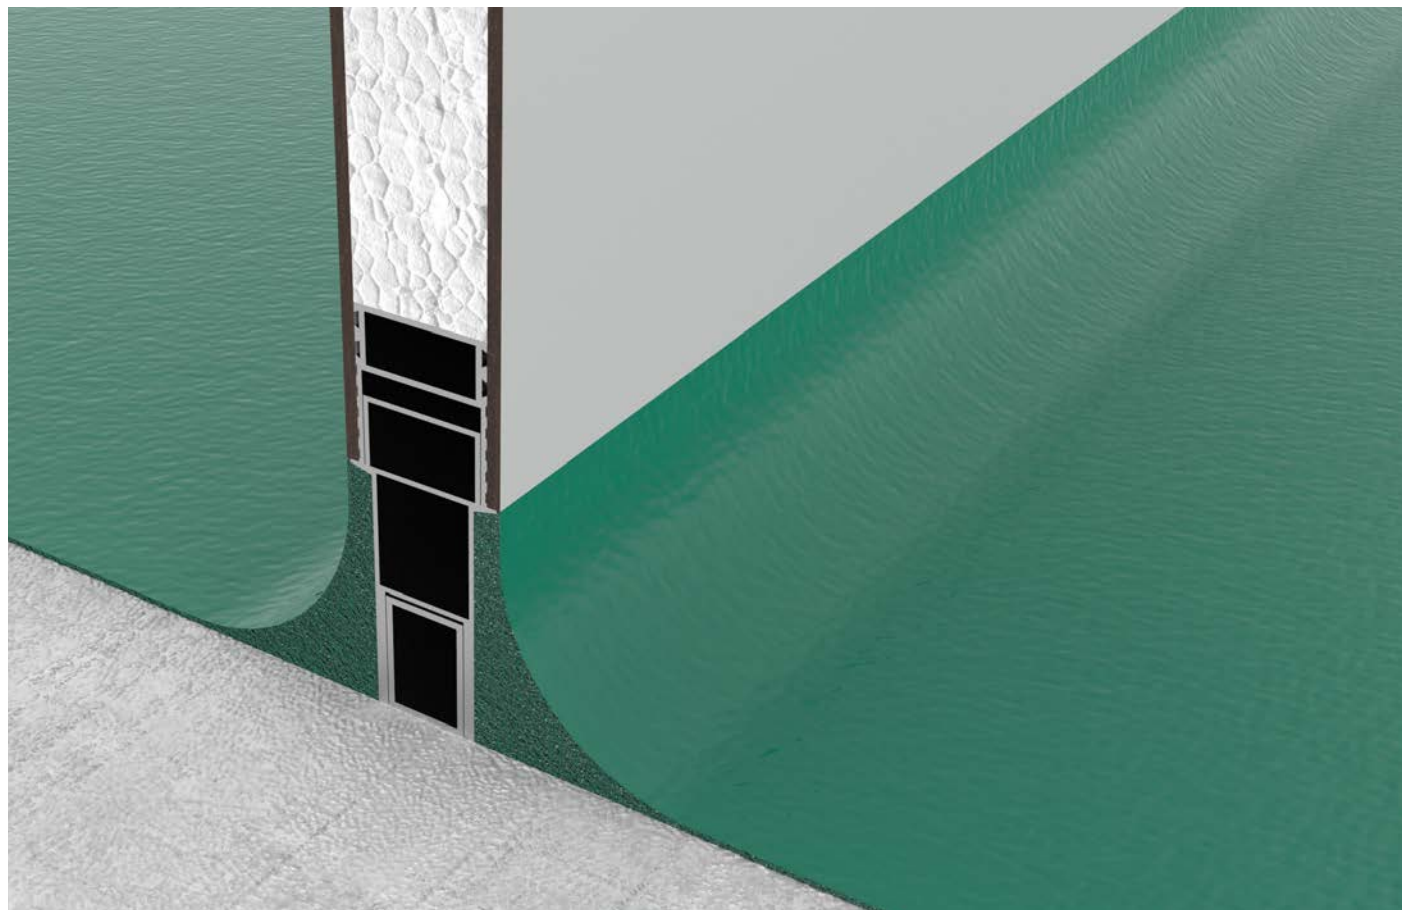

Description

1. Tubular aluminum profile (36x25 mm) to fix to floor the partition wall
2. Aluminum flat profile (H 60 mm)
3. Wall panel

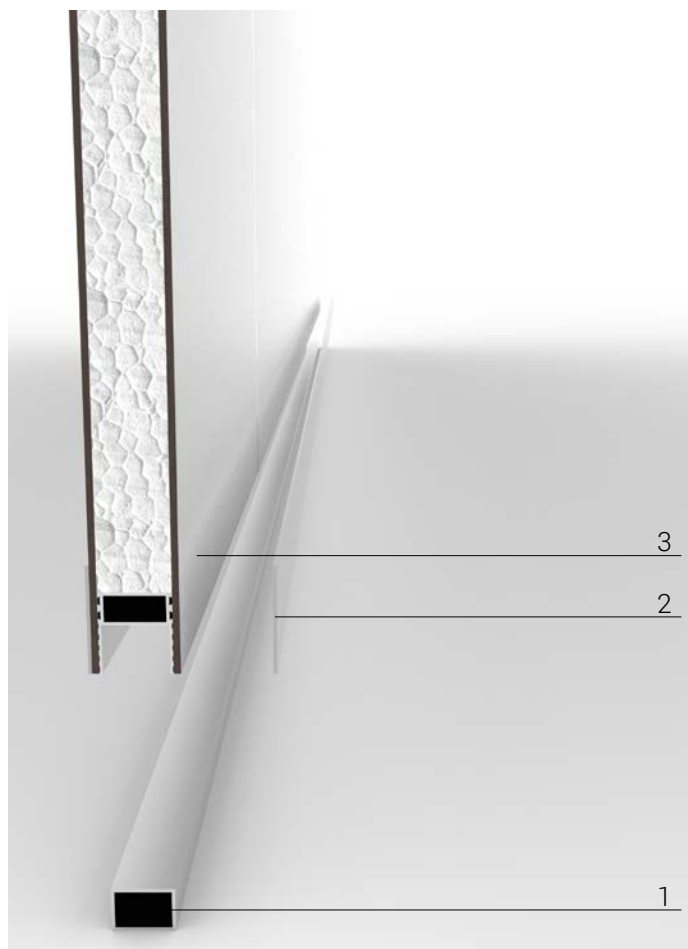


Standard profile colors

RAL 9010 - Pure white Anodized aluminum OX 

Profile colors on request



RAL palette colors

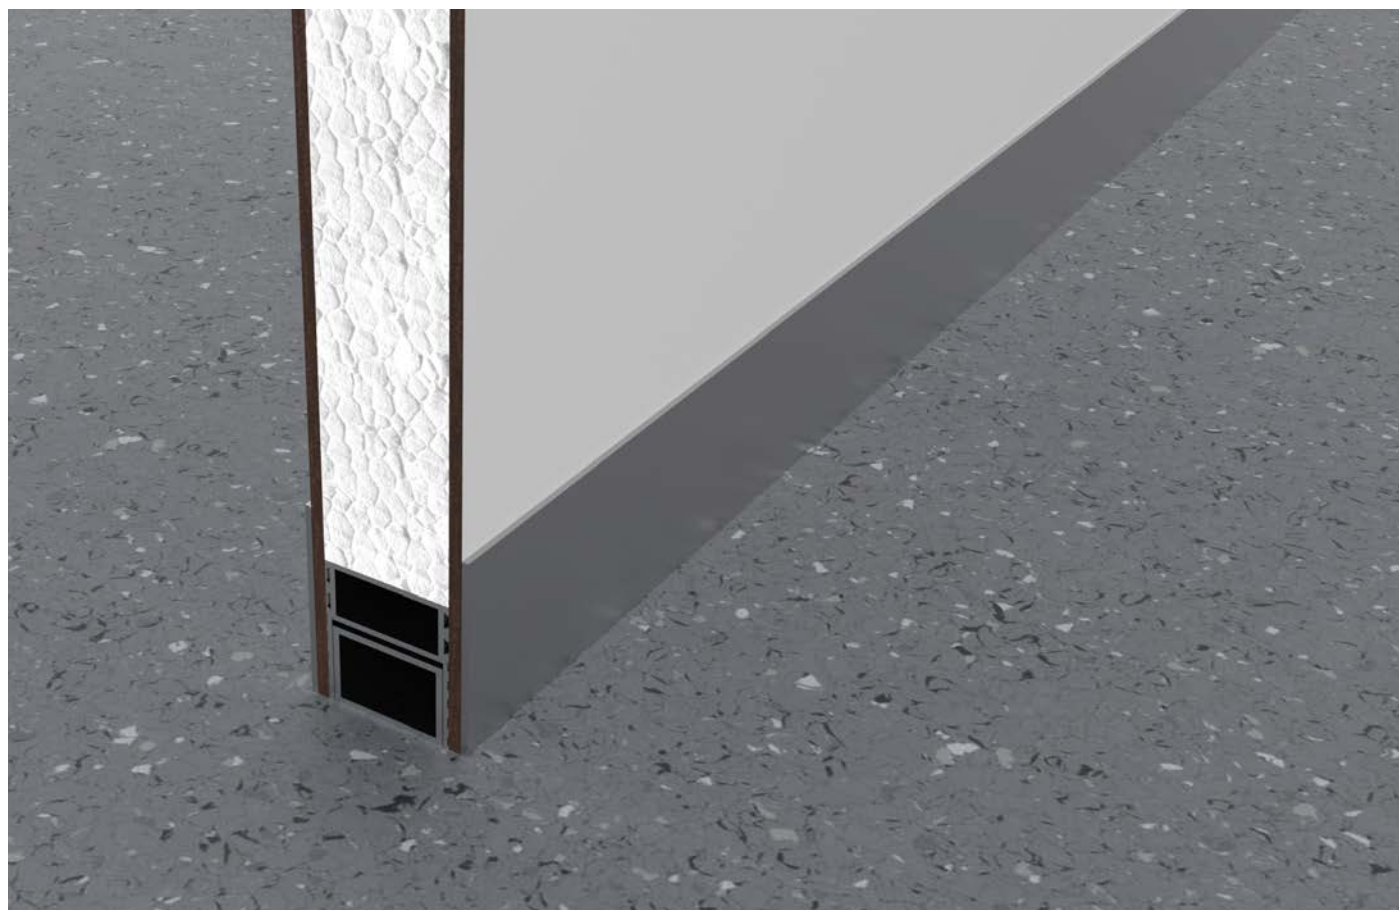

3.5. 180° vertical connection

cod. art. P-GVE

Description

1. Coving support
2. Extruded curve aluminum profile wall to wall
3. Caulked with silicone
4. Wall panel


Standard profile colors

- RAL 9010 - Pure white
- Anodized aluminum OX

Profile colors on request



RAL palette colors

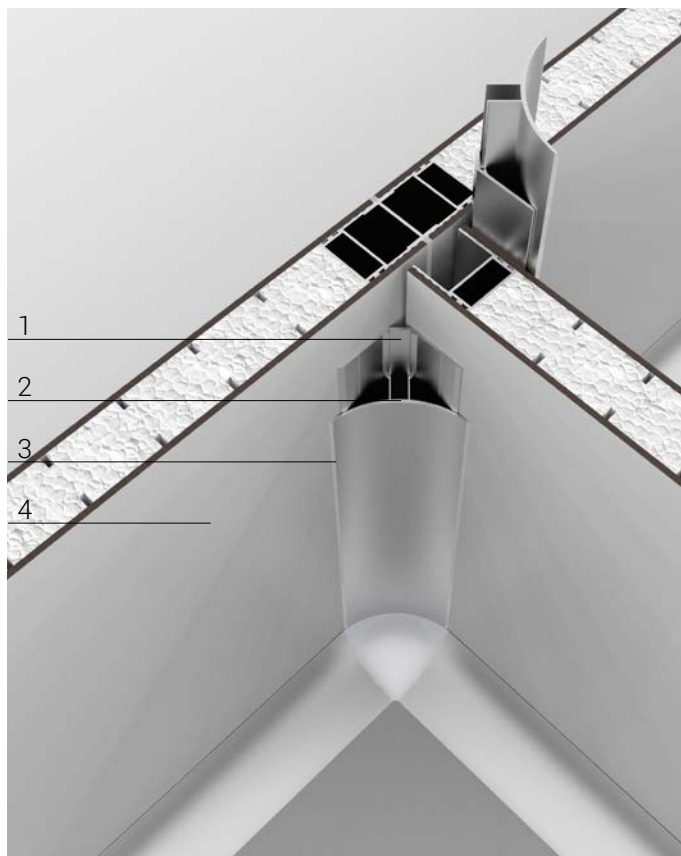

3.6. Regular curved profile

cod. art. P-CUGR

Description

1. Regular aluminum curved profile
2. Caulked with silicone
3. Wall panel


Standard profile colors


- RAL 9010 - Pure white
- Anodized aluminum OX

Profile colors on request



RAL palette colors

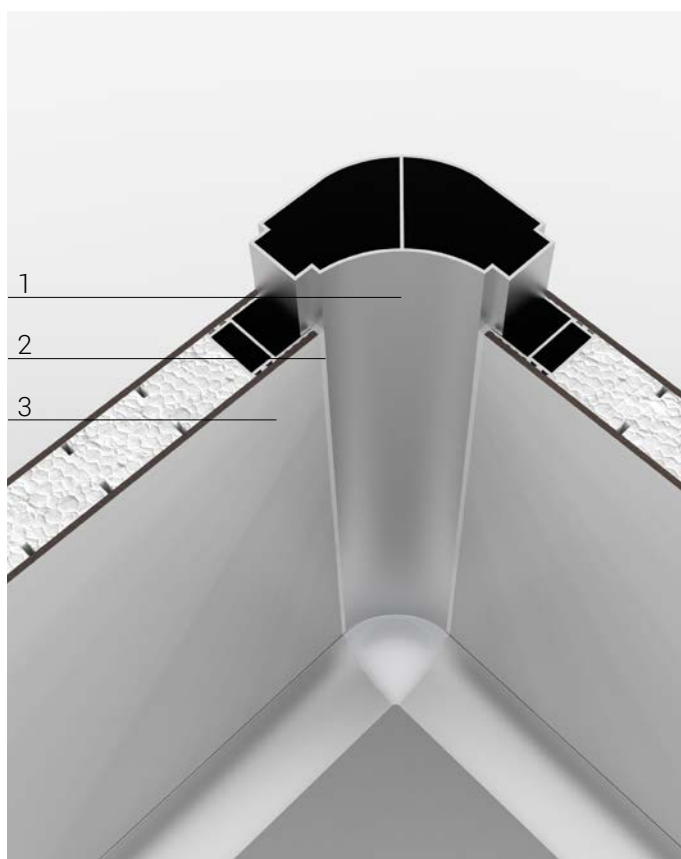

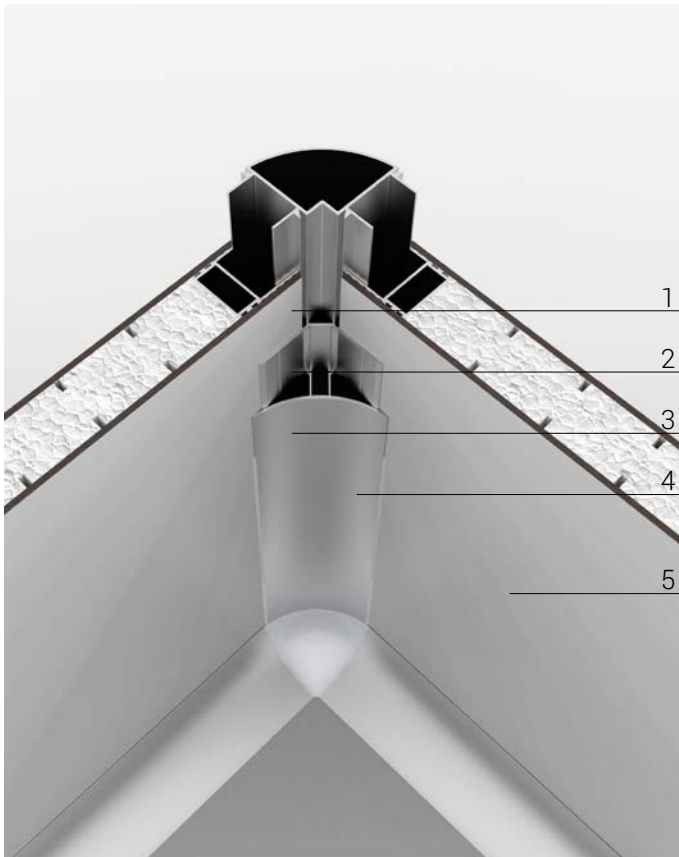

Description

1. Small aluminum curved profile
2. Coving support
3. Extruded curve aluminum profile wall to wall
4. Caulked with silicone
5. Wall panel

Standard profile colors

RAL 9010 - Pure white



Anodized aluminum OX




Profile colors on request



RAL palette colors

Coving with L profile at external

3.8.

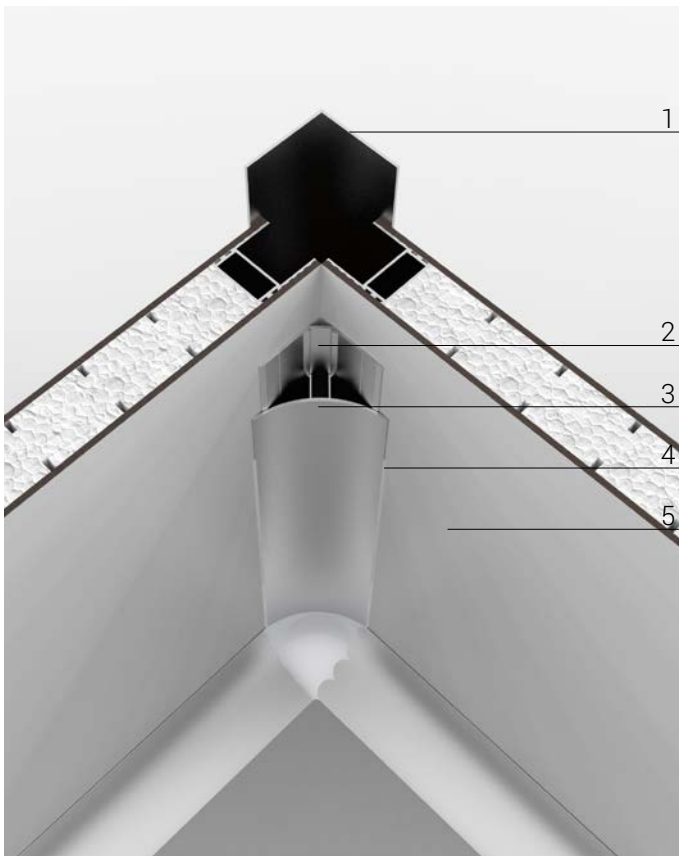

Description

1. L 60x60 profile
2. Coving support
3. Extruded curve aluminum profile wall to wall
4. Caulked with silicone
5. Wall panel

Standard profile colors

RAL 9010 - Pure white



Alluminio anodizzato OX



Profile colors on request



RAL palette colors

3.9. Head profile

cod. art. P-PRTES20

Description

1. Aluminum head profile
2. Caulked with silicone
3. Wall panel


Standard profile colors

-  RAL 9010 - Pure white
-  Anodized aluminum OX

Profile colors on request



RAL palette colors

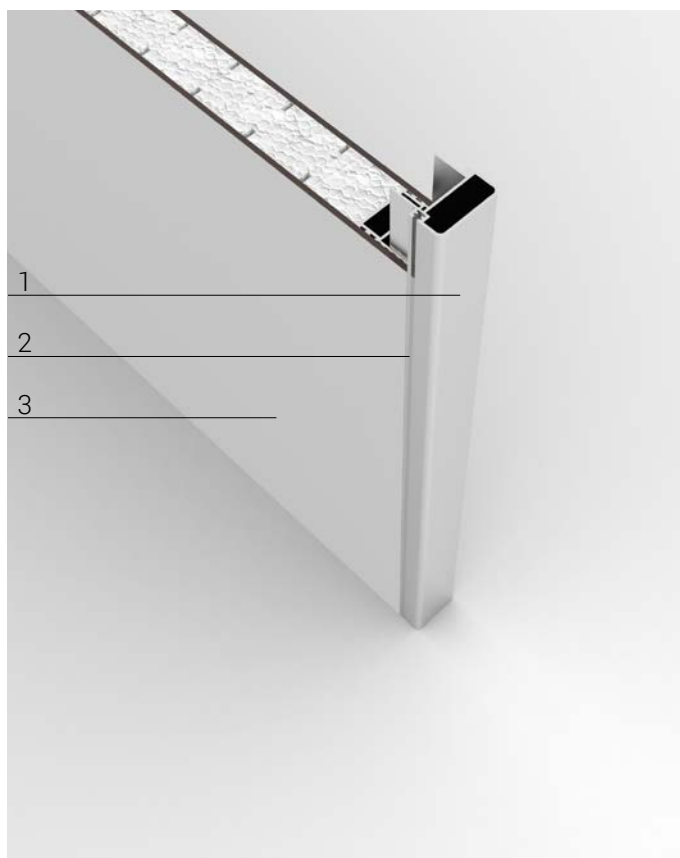

3.10. C profile

cod. art. P-PRTESC

Description

1. Aluminum C profile
2. Caulked with silicone
3. Wall panel


Standard profile colors

-  RAL 9010 - Pure white
-  Anodized aluminum OX

Profile colors on request




RAL palette colors

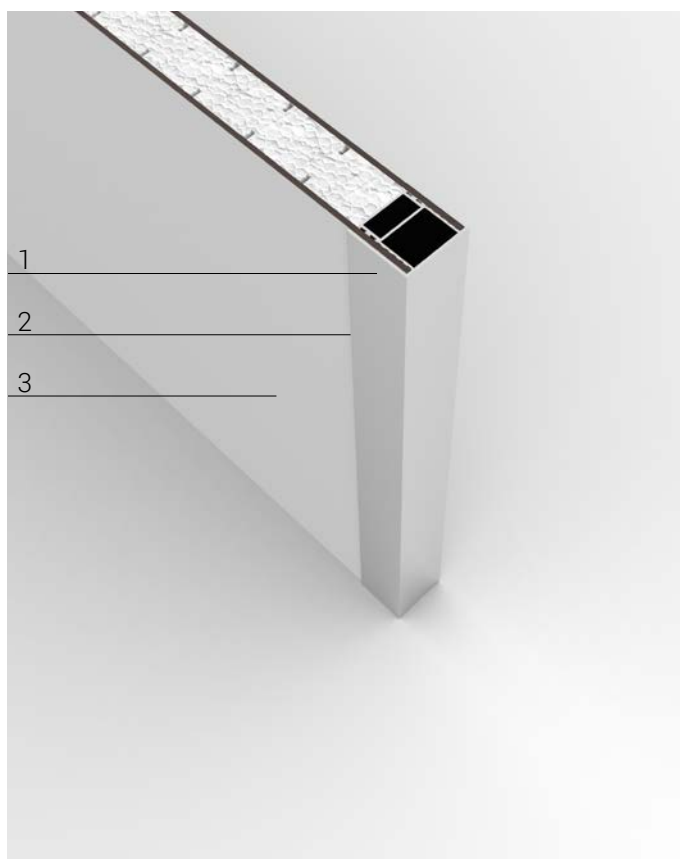

Description

1. Ceiling panel
2. Extruded curve aluminum profile wall to ceiling
3. Wall panel

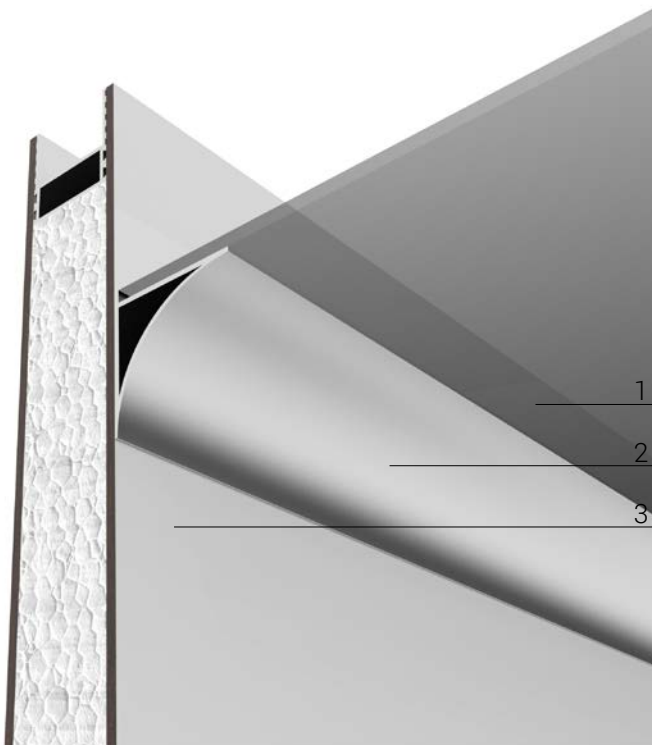

Standard profile colors

RAL 9010 - Pure white

Anodized aluminum OX

Profile colors on request




RAL palette colors

L profile at ceiling

3.12.

Description

1. Ceiling panel
2. L 60x60-30x30 aluminum profile at ceiling
3. Wall panel

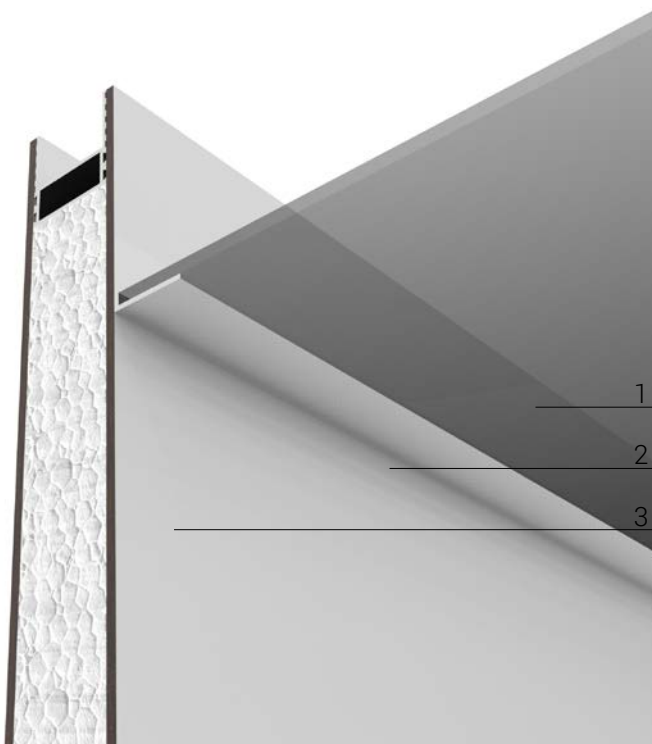

Standard profile colors

RAL 9010 - Pure white

Anodized aluminum OX


Profile colors on request



RAL palette colors

3.13. Floor connection

cod. art. P-ROP

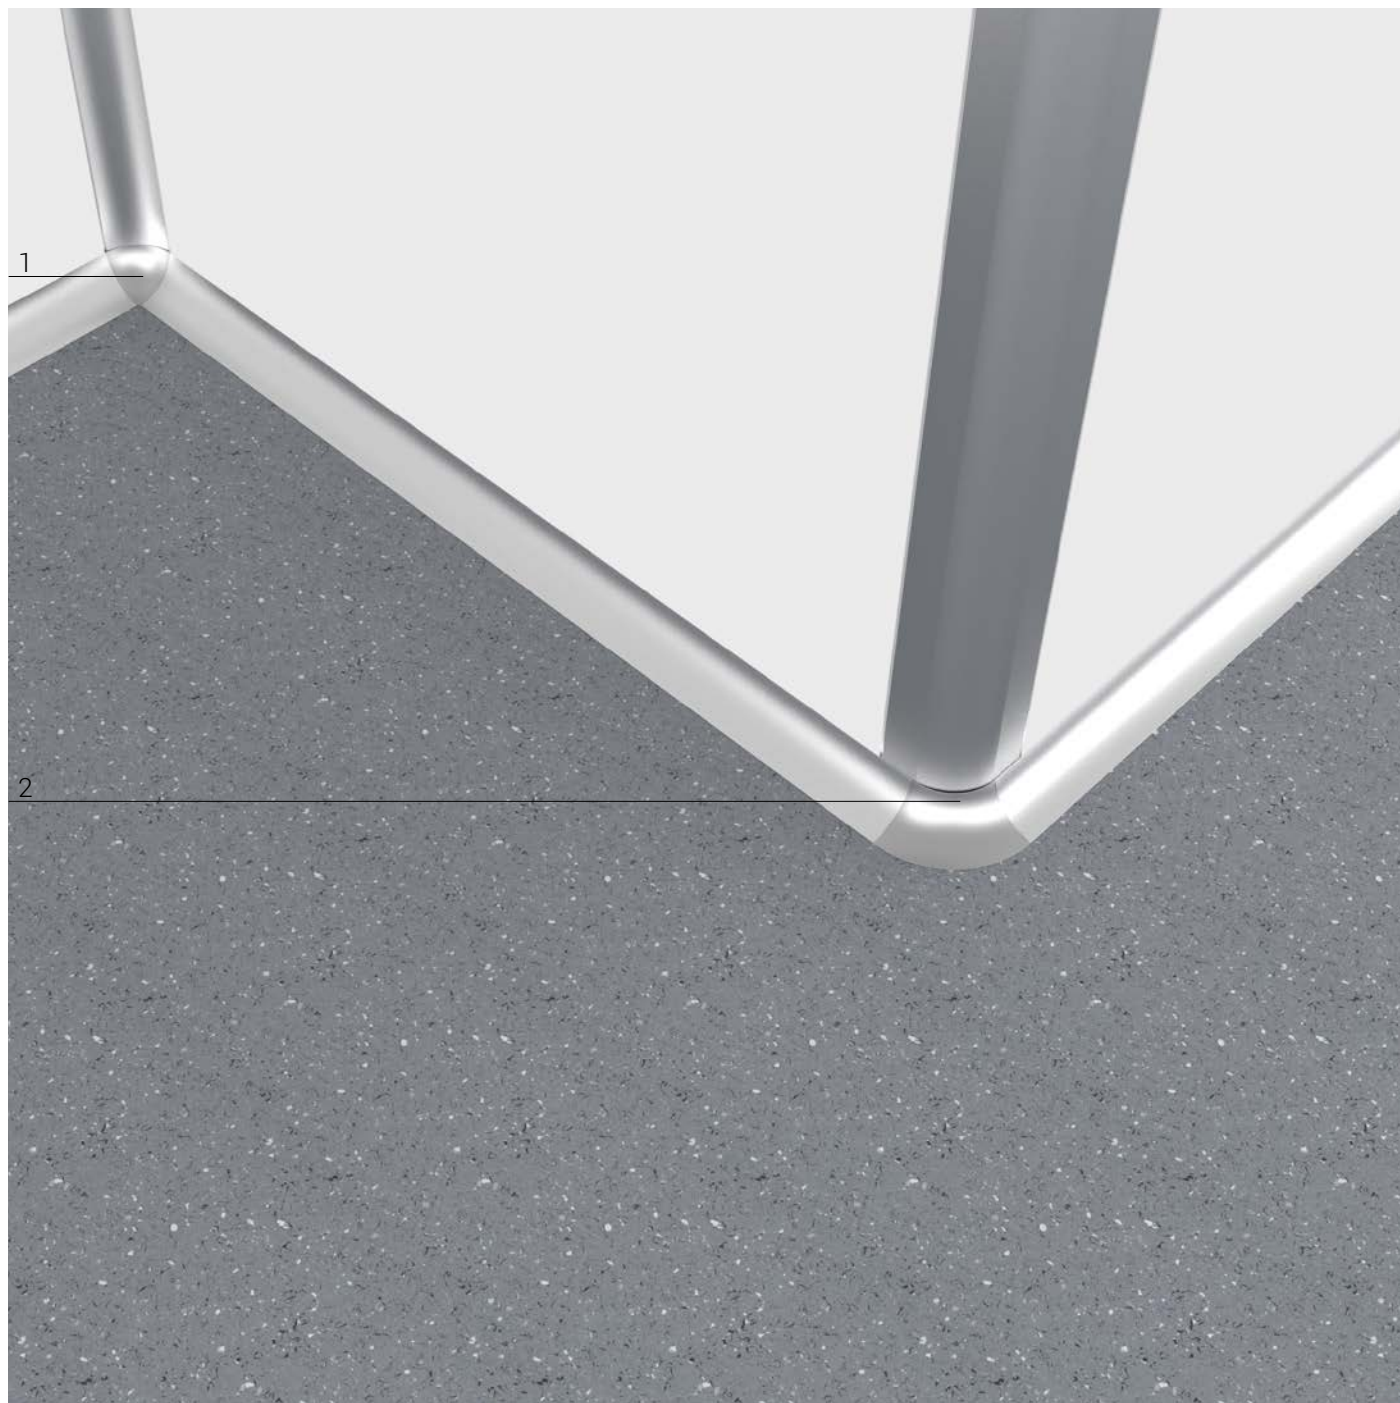

Description

1. Three way connector at floor 1/4 of sphere
2. Three way connector at floor 1/8 of sphere


Standard profile colors

-  RAL 9010 - Pure white
-  Anodized aluminum OX

Profile colors on request



RAL palette colors

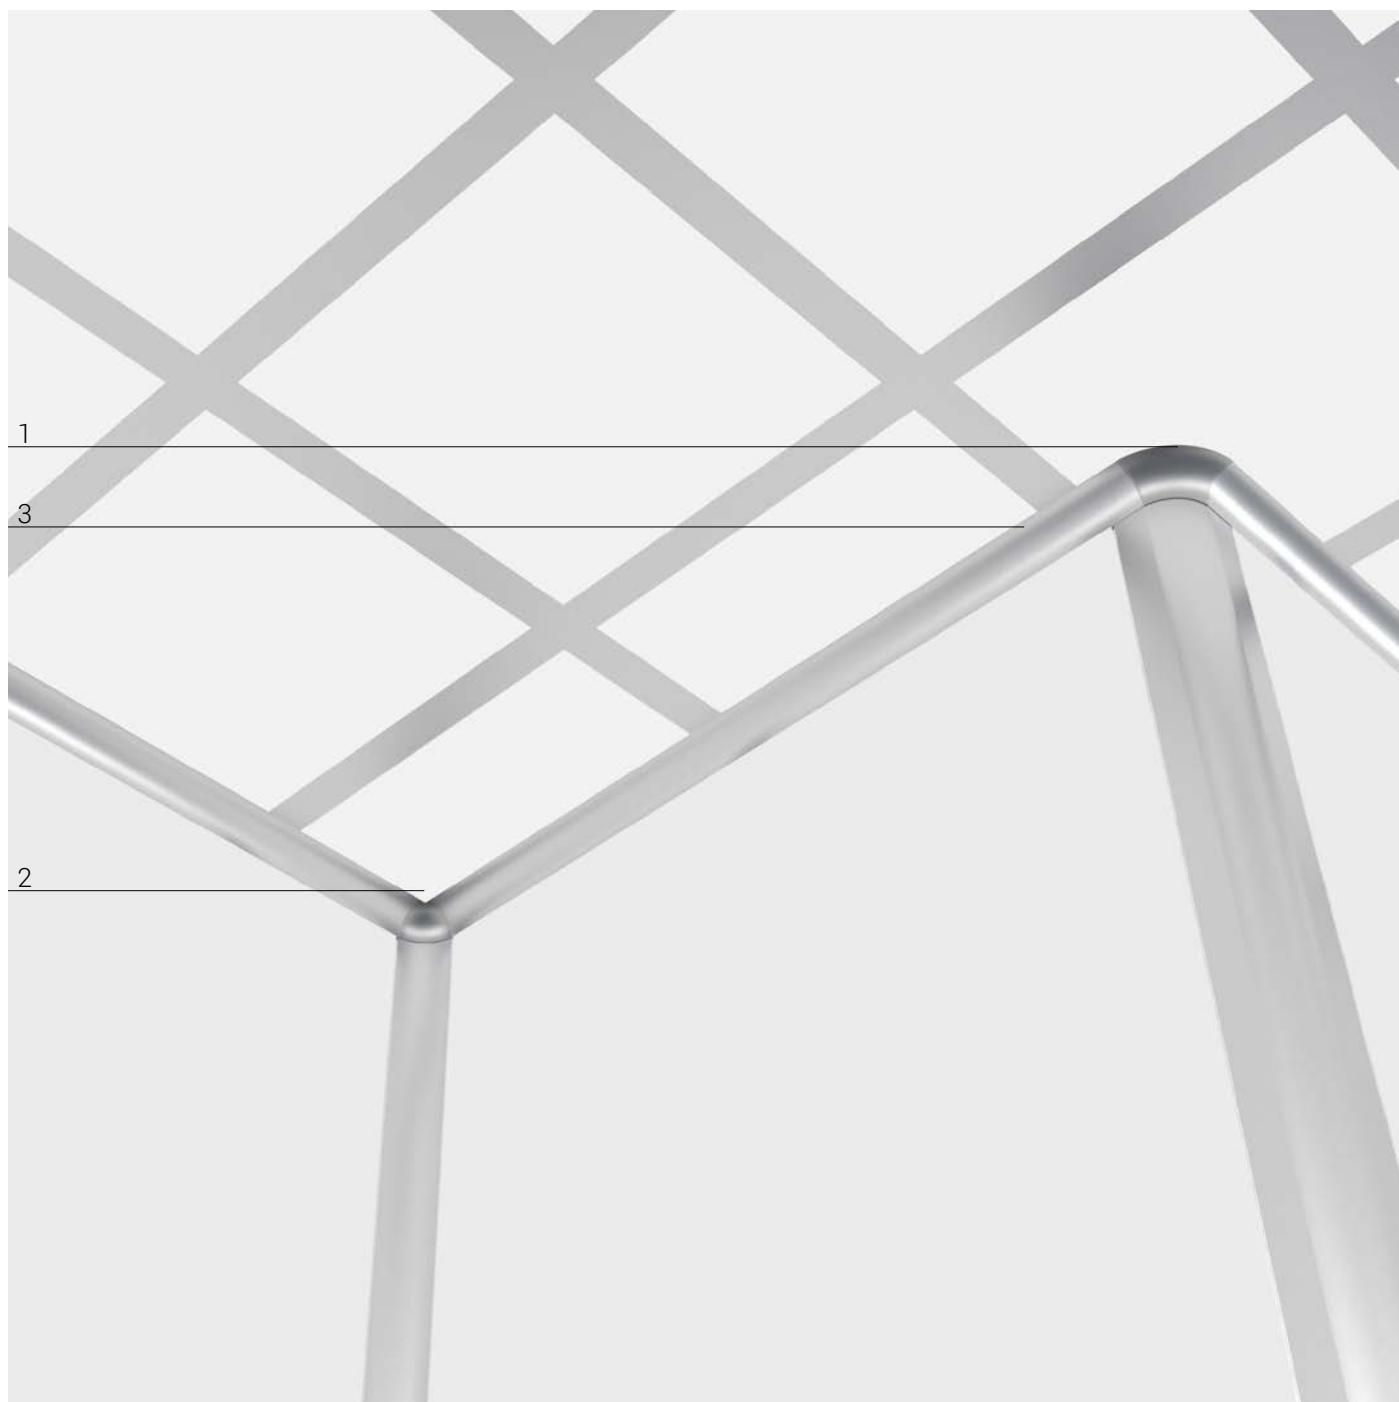

Description

1. Three way connector at ceiling 1/4 of sphere
2. Three way connector at ceiling 1/8 of sphere
3. Coving at ceiling

Standard profile colors

RAL 9010 - Pure white 

Anodized aluminum OX 

Profile colors on request



RAL palette colors